

Rovanco Piping Systems

20535 S.E. Frontage Road
Joliet, IL 60431
(815) 741-6700

Mid Temp PUR Foaming Installation Instructions INS-MTF-**PUR**

Last Revision 07/29/26

This instruction manual will give you all the information needed in terms of techniques, tools, and accessories required to install ROVANCO's Mid Temperature Foam system. If you follow the instructions carefully, the end result will be a high quality, Mid Temperature PUR Foam piping system. Thank you for showing your confidence in ROVANCO by purchasing its products. We sincerely appreciate your business and we will provide you with quality products with a fair price and "great" service to deserve your future business. Please contact your local ROVANCO Manufacturer's Representative for information about all of the products provided by ROVANCO.


PLEASE READ CAREFULLY—MIX IS A 50/50 RATIO!!

GENERAL FOAMING

MATERIALS (supplied by Rovanco)

Each standard foam kit contains the following items:

- 1) Containers of A & B agents. Refer to M.S.D.S. for safety requirements

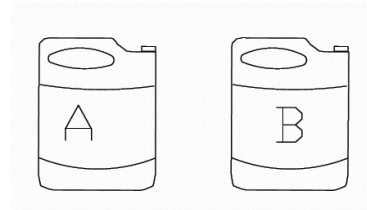


- 2) Mixer head attachment



- 3) Material Safety Data Sheets. (M.S.D.S.)


MATERIALS (To be supplied by the contractor)

- 1) Non-waxed paper mixing cups (32 oz.)
- 2) Measuring containers
- 3) Paper towels

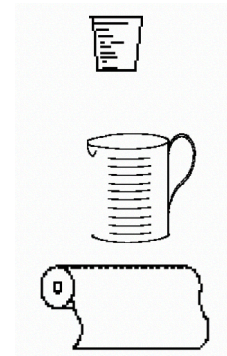


STORAGE


The foam kits should be stored at 70 degrees (F). Keep the containers out of direct sunlight. Higher or lower temperature will affect the products performance. Liquid foam has a shelf life of 90 days from the date displayed. Not following storage conditions will effect warranty.

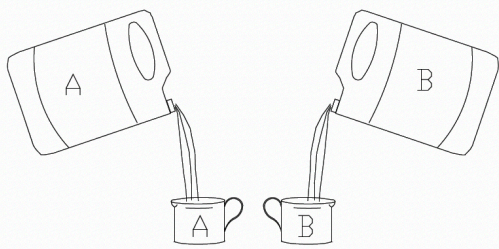


1.1

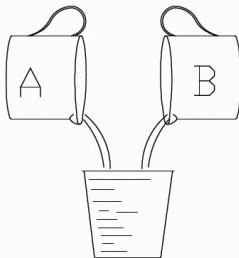

1.2

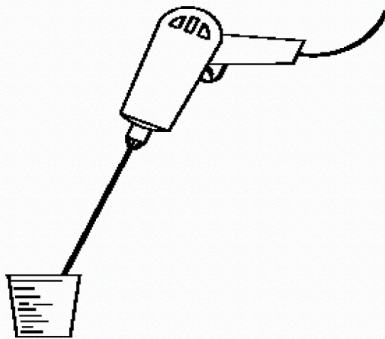

1.3

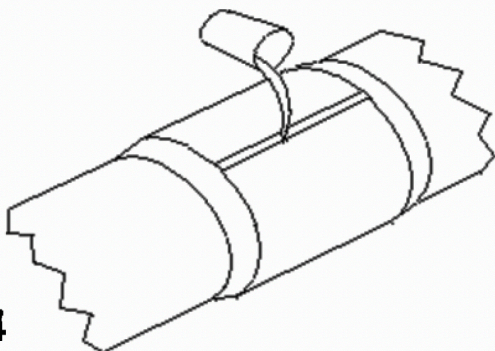


1.4

INSULATING JOINTS


- 1) Do not begin the foaming process until you have read and understand the foaming process. Prepare the joint to be insulated following the procedures outlined in the piping system installation instructions included with your shipment.
- 2) Label your measuring cups with the letters A & B to prevent a mix-up later on. Examine the mixing charts on pages 3 and 4, then pour the correct amount of A & B agents into the separate measuring cups. See figure 1.1. Make sure to have the right size fitting and insulation thickness. Some larger sizes require two or three separate pours.
- 3) Pour the measured amounts of A & B material into a mixing cup.
- 4) Using an electric drill with the mixer head attachment provided, mix the components for twenty seconds. In temperatures above 70 degrees mix for 12-15 seconds. See figure 1.3. The cream time is shown on the graph below. Spin the mixing bit clean in an empty cup or box. If foam build up occurs it can be cleaned off with a utility knife or similar tool after it has cured. If pouring in cold conditions, steel carrier pipe must be heated before you pour or foam will not yield.

NOTE: If foam is activating/rising too quickly while using the drill & mixer head, you should mix the foam by hand to slow activation.

- 3) Pour the mixed foam into the mold which you are insulating. See figure 1.4.

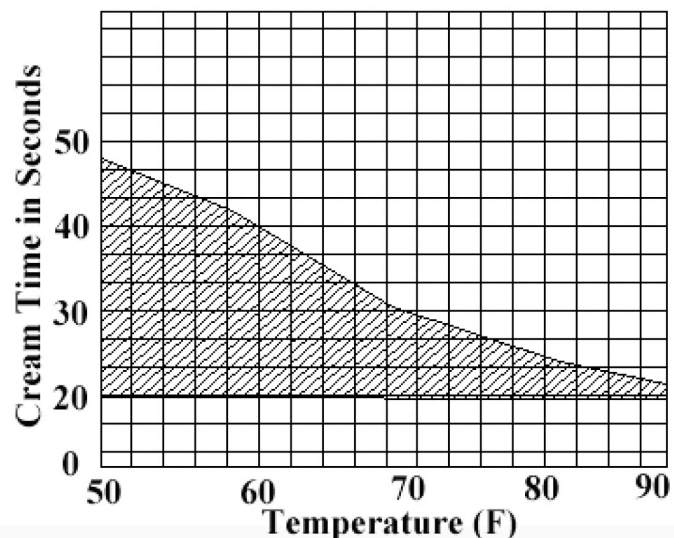

Yield of Rovanco Foam Kit

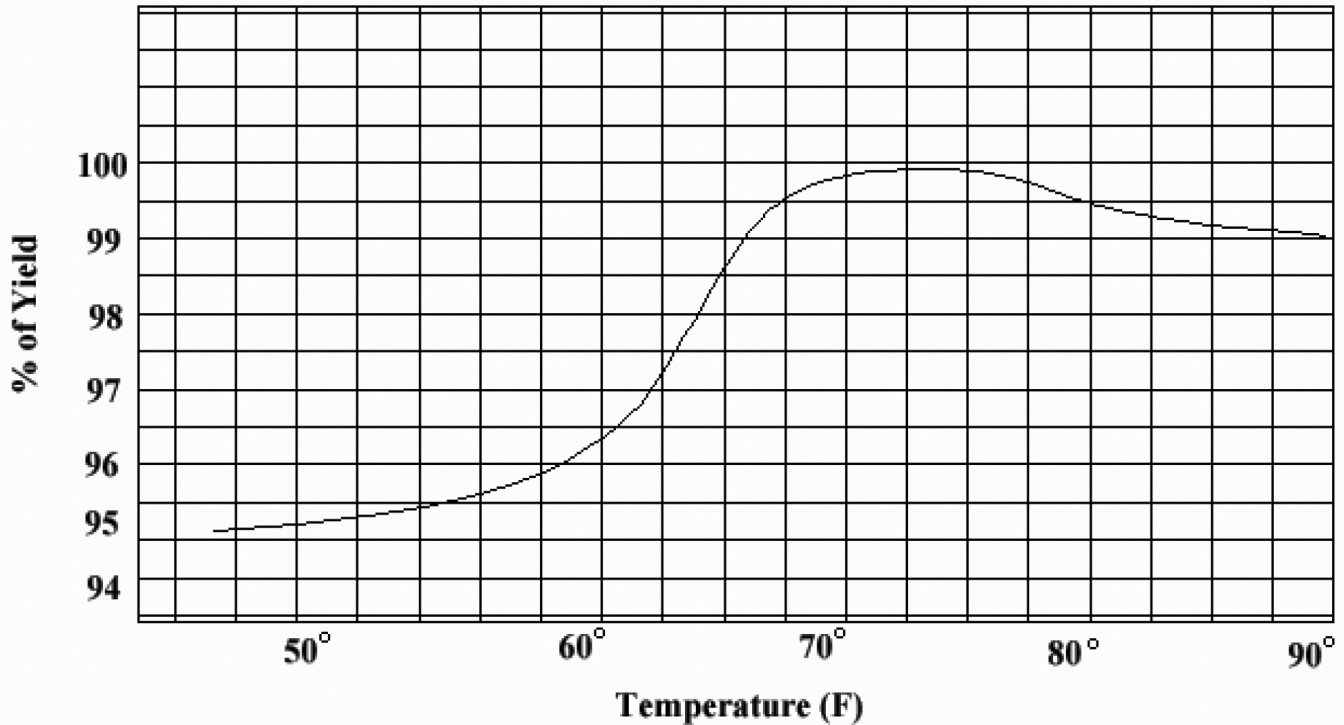

Note: Quantities shown are for standard Rovanco Hard Shell Fitting Cover Kits. Adjust amounts as required to fill joints. Larger joints may require two or three pours. For best results, store and maintain A & B components as close to 70 degrees (f) as possible. In temperatures below 70 (f), for best performance, pre-heat pipe and molds. Read M.S.D.S thoroughly, you are using chemicals which could present a hazard if used improperly.

The next pages illustrate the proper mixing quantities for Parts A & B of the Mid-Temp PUR Foam Kit. **Please use these charts in mixing your quantities of foam based on the piping system your are working on, Insul-8 Foam System or Insul-800 High Temp Conduit.**

Note: For best results, store and maintain A & B components as close to 70 degrees (f) as possible. In temperatures below 70° F, for best performance, pre-heat pipe and molds. Read S.D.S thoroughly, you are using chemicals which could present a hazard if used improperly. This page illustrates the proper mixing quantities for Parts A & B of the Polyurethane Foam Kits. Please use these charts when mixing your quantities of foam.

Insul-8 POLYURETHANE Mixing Table — In OUNCES —

Parts “A” & “B” ARE a 50/50 Mix Ratio (see table below)

NOTE: Depending on outside conditions when installing, slightly more/less foam may be required.

Carrier	Cross Section	Straight Joint		Elbow		Tee	
	Jacket	Ounces “A”	Ounces “B”	Ounces “A”	Ounces “B”	Ounces “A”	Ounces “B”
1"	4	3	3	3	3	6	6
	6	6	6	8	8	12	12
	8	12	12	15	15	13	13
1 1/4"	4	3	3	3	3	6	6
	6	6	6	8	8	12	12
	8	12	12	15	15	13	13
1 1/2"	4	3	3	3	3	12	12
	6	6	6	8	8	11	11
	8	12	12	15	15	13	13
2"	6	6	6	7	7	11	11
	8	12	12	15	15	13	13
	10	13	13	13	13	32	32
2 1/2"	6	6	6	6	6	10	10
	8	12	12	12	12	13	13
	10	18	18	13	13	32	32
3"	6	6	6	6	6	9	9
	8	12	12	12	12	18	18
	10	18	18	13	13	32	32
4"	8	9	9	12	12	17	17
	10	16	16	20	20	30	30
	12	24	24	32	32	46	46
5"	10	15	15	18	18	11	11
	12	24	24	30	30	44	44
6"	10	12	12	15	15	21	21
	12	21	21	11	11	40	40
8"	12	16	16	19	19	30	30
	14	24	24	36	36	54	54
10"	14	16	16	24	24	36	36
	16	30	30	45	45	66	66
12"	16	21	21	32	32	45	45
	18	33	33	54	54	80	80
	20	48	48	80	80	120	120
14"	18	11	11	45	45	66	66
	20	42	42	72	72	68	68
16"	20	30	30	53	36	78	78
	22	48	48	84	84	124	124
18"	22	33	33	62	62	93	93
	24	51	51	96	96	98	98
20"	24	36	36	72	72	68	68
	26	57	57	71	71	168	168
22"	26	71	71	82	82	84	84
	28	62	62	128	72	192	192
24"	28	42	42	93	93	140	140
	30	66	66	144	144	216	216

rev 07/01/26

Insul-800 POLYURETHANE Mixing Table — In OUNCES —

Parts “A” & “B” ARE a 50/50 Mix Ratio (see table below)

NOTE: Depending on outside conditions when installing, slightly more/less foam may be required.

Carrier	Cross Section	Straight Joint		Elbow		Tee	
	Jacket	Ounces “A”	Ounces “B”	Ounces “A”	Ounces “B”	Ounces “A”	Ounces “B”
1"	4	6	6	6	6	12	12
	6	12	12	16	16	24	24
	8	24	24	30	30	26	26
1 1/4"	4	6	6	6	6	12	12
	6	12	12	16	16	24	24
	8	24	24	30	30	26	26
1 1/2"	4	6	6	6	6	24	24
	6	12	12	16	16	22	22
	8	24	24	30	30	26	26
2"	6	12	12	14	14	22	22
	8	24	24	30	30	26	26
	10	26	26	26	26	64	64
2 1/2"	6	12	12	12	12	20	20
	8	24	24	24	24	26	26
	10	36	36	26	26	64	64
3"	6	12	12	12	12	18	18
	8	24	24	24	24	36	36
	10	36	36	26	26	64	64
4"	8	18	18	24	24	34	34
	10	32	32	40	40	60	60
	12	48	48	64	64	92	92
5"	10	30	30	36	36	22	22
	12	48	48	60	60	88	88
6"	10	24	24	30	30	42	42
	12	42	42	22	22	80	80
8"	12	32	32	38	38	60	60
	14	48	48	72	72	108	108
10"	14	32	32	48	48	72	72
	16	60	60	90	90	132	132
12"	16	42	42	64	64	90	90
	18	66	66	108	108	160	160
	20	96	96	160	160	240	240
14"	18	22	22	90	90	132	132
	20	84	84	144	144	136	136
16"	20	60	60	106	106	156	156
	22	96	96	168	168	248	248
18"	22	66	66	124	124	186	186
	24	102	102	192	192	196	196
20"	24	72	72	144	144	136	136
	26	114	114	142	142	336	336
22"	26	142	142	164	164	168	168
	28	124	124	256	256	384	384
24"	28	84	84	186	186	280	280
	30	132	132	288	288	432	432